

外挂式红外线语音遥控器

内置语音指令表

唤醒词 “黑猫”

| ● 空调 | | ● 电视/机顶盒 | | ● 风扇 | | ● 其它家电 | | ● 设置 | | | |
|------|----------|----------|--------|------|-------|--------|--------|------|---------|-----|-----------|
| 1 | 黑猫开空调 | 39 | 黑猫开电视 | 85 | 黑猫风扇开 | 122 | 黑猫投影机开 | 171 | 黑猫开风干 | 219 | 黑猫遥控器设定 |
| 2 | 黑猫关空调 | 40 | 黑猫关电视 | 86 | 黑猫风扇关 | 123 | 黑猫投影机关 | 172 | 黑猫开照明 | 220 | 黑猫删除所有遥控器 |
| 3 | 黑猫开冷气 | 41 | 黑猫苹果开 | 87 | 黑猫冷风开 | 124 | 黑猫新风机开 | 173 | 黑猫开消毒 | 221 | 黑猫重说命令词 |
| 4 | 黑猫关冷气 | 42 | 黑猫苹果关 | 88 | 黑猫冷风关 | 125 | 黑猫新风机关 | 174 | 黑猫开冲洗 | 222 | 黑猫重新学习 |
| 5 | 黑猫风速低 | 43 | 黑猫小米开 | 89 | 黑猫微风开 | 126 | 黑猫暖风机开 | 175 | 黑猫开清洁 | 223 | 黑猫确定删除 |
| 6 | 黑猫风速中 | 44 | 黑猫小米关 | 90 | 黑猫微风光 | 127 | 黑猫暖风机关 | 176 | 黑猫按摩椅开 | 224 | 黑猫不删除 |
| 7 | 黑猫风速高 | 45 | 黑猫谷歌开 | 91 | 黑猫强风开 | 128 | 黑猫除湿机开 | 177 | 黑猫按摩椅关 | 225 | 黑猫退出设定 |
| 8 | 黑猫风速自动 | 46 | 黑猫谷歌关 | 92 | 黑猫强风光 | 129 | 黑猫除湿机关 | 178 | 黑猫按摩强 | 226 | 黑猫我的版本号 |
| 9 | 黑猫调高一度 | 47 | 黑猫开机顶盒 | 93 | 黑猫弱风开 | 130 | 黑猫开电灯 | 179 | 黑猫按摩弱 | 227 | 黑猫大声一点 |
| 10 | 黑猫调低一度 | 48 | 黑猫关机顶盒 | 94 | 黑猫弱风光 | 131 | 黑猫关电灯 | 180 | 黑猫振动强 | 228 | 黑猫小声一点 |
| 11 | 黑猫升一度 | 49 | 黑猫信号源一 | 95 | 黑猫摆动开 | 132 | 黑猫照明开 | 181 | 黑猫振动弱 | | |
| 12 | 黑猫降一度 | 50 | 黑猫信号源二 | 96 | 黑猫摆动关 | 133 | 黑猫照明关 | 182 | 黑猫捶打快 | | |
| 13 | 黑猫风向上下 | 51 | 黑猫信号源三 | 97 | 黑猫灯光开 | 134 | 黑猫光调亮 | 183 | 黑猫捶打慢 | | |
| 14 | 黑猫风向左右 | 52 | 黑猫信号源A | 98 | 黑猫灯光关 | 135 | 黑猫光调暗 | 184 | 黑猫靠背上 | | |
| 15 | 黑猫风向静止 | 53 | 黑猫信号源B | 99 | 黑猫排风开 | 136 | 黑猫光明亮 | 185 | 黑猫靠背下 | | |
| 16 | 黑猫风口向上 | 54 | 黑猫信号源C | 100 | 黑猫排风关 | 137 | 黑猫光柔和 | 186 | 黑猫请开门 | | |
| 17 | 黑猫风口向下 | 55 | 黑猫加音量 | 101 | 黑猫开热风 | 138 | 黑猫卷帘收 | 187 | 黑猫请关门 | | |
| 18 | 黑猫风口向左 | 56 | 黑猫减音量 | 102 | 黑猫关热风 | 139 | 黑猫卷帘放 | 188 | 黑猫请开水 | | |
| 19 | 黑猫风口向右 | 57 | 黑猫声音大 | 103 | 黑猫开凉风 | 140 | 黑猫幕布收 | 189 | 黑猫请关水 | | |
| 20 | 黑猫风口静止 | 58 | 黑猫声音小 | 104 | 黑猫关凉风 | 141 | 黑猫幕布下 | 190 | 黑猫请加水 | | |
| 21 | 黑猫摆动风向 | 59 | 黑猫上一台 | 105 | 黑猫急速风 | 142 | 黑猫衣架升 | 191 | 黑猫请冲水 | | |
| 22 | 黑猫风口晃动 | 60 | 黑猫下一台 | 106 | 黑猫高速风 | 143 | 黑猫衣架降 | 192 | 黑猫窗帘上 | | |
| 23 | 黑猫冷气模式 | 61 | 黑猫转上台 | 107 | 黑猫中速风 | 144 | 黑猫右窗帘开 | 193 | 黑猫窗帘下 | | |
| 24 | 黑猫暖气模式 | 62 | 黑猫转下台 | 108 | 黑猫低速风 | 145 | 黑猫右窗帘关 | 194 | 黑猫窗帘上下停 | | |
| 25 | 黑猫送风模式 | 63 | 黑猫按键上 | 109 | 黑猫自然风 | 146 | 黑猫右窗帘停 | 195 | 黑猫内窗帘开 | | |
| 26 | 黑猫除湿模式 | 64 | 黑猫按键下 | 110 | 黑猫睡眠风 | 147 | 黑猫左窗帘开 | 196 | 黑猫内窗帘关 | | |
| 27 | 黑猫自动模式 | 65 | 黑猫按键左 | 111 | 黑猫微微风 | 148 | 黑猫左窗帘关 | 197 | 黑猫内窗帘停 | | |
| 28 | 黑猫一般温度 | 66 | 黑猫按键右 | 112 | 黑猫风量加 | 149 | 黑猫左窗帘停 | 198 | 黑猫外窗帘开 | | |
| 29 | 黑猫一般常温 | 67 | 黑猫确定 | 113 | 黑猫风量减 | 150 | 黑猫窗帘开 | 199 | 黑猫外窗帘关 | | |
| 30 | 黑猫冷气二十五度 | 68 | 黑猫回上一页 | 114 | 黑猫开立扇 | 151 | 黑猫窗帘关 | 200 | 黑猫外窗帘停 | | |
| 31 | 黑猫冷气二十六度 | 69 | 黑猫上一键 | 115 | 黑猫关立扇 | 152 | 黑猫窗帘停 | 201 | 黑猫右窗户开 | | |
| 32 | 黑猫冷气二十七度 | 70 | 黑猫下一键 | 116 | 黑猫开吊扇 | 153 | 黑猫开动 | 202 | 黑猫右窗户关 | | |
| 33 | 黑猫暖气二十八度 | 71 | 黑猫按左键 | 117 | 黑猫关吊扇 | 154 | 黑猫关闭 | 203 | 黑猫右窗户停 | | |
| 34 | 黑猫暖气二十九度 | 72 | 黑猫按右键 | 118 | 黑猫开风箱 | 155 | 黑猫风力强劲 | 204 | 黑猫左窗户开 | | |
| 35 | 黑猫暖气三十度 | 73 | 黑猫确认 | 119 | 黑猫关风箱 | 156 | 黑猫风力柔和 | 205 | 黑猫左窗户关 | | |
| 36 | 黑猫模式循环 | 74 | 黑猫回上次 | 120 | 黑猫开冰扇 | 157 | 黑猫动力增强 | 206 | 黑猫左窗户停 | | |
| 37 | 黑猫风速循环 | 75 | 黑猫前一键 | 121 | 黑猫关冰扇 | 158 | 黑猫动力减弱 | 207 | 黑猫窗户开 | | |
| 38 | 黑猫风向循环 | 76 | 黑猫后一键 | | | 159 | 黑猫动力放慢 | 208 | 黑猫窗户关 | | |
| | | 77 | 黑猫往左键 | | | 160 | 黑猫请启动 | 209 | 黑猫窗户停 | | |
| | | 78 | 黑猫往右键 | | | 161 | 黑猫请摆动 | 210 | 黑猫窗户上 | | |
| | | 79 | 黑猫菜单面 | | | 162 | 黑猫请上升 | 211 | 黑猫窗户下 | | |
| | | 80 | 黑猫主页面 | | | 163 | 黑猫请下降 | 212 | 黑猫窗户上下停 | | |
| | | 81 | 黑猫上一页 | | | 164 | 黑猫往前进 | 213 | 黑猫内窗户开 | | |
| | | 82 | 黑猫下一页 | | | 165 | 黑猫往后退 | 214 | 黑猫内窗户关 | | |
| | | 83 | 黑猫返回 | | | 166 | 黑猫请向左 | 215 | 黑猫内窗户停 | | |
| | | 84 | 黑猫退出 | | | 167 | 黑猫请向右 | 216 | 黑猫外窗户开 | | |
| | | | | | | 168 | 黑猫请暂停 | 217 | 黑猫外窗户关 | | |
| | | | | | | 169 | 黑猫请停止 | 218 | 黑猫外窗户停 | | |
| | | | | | | 170 | 黑猫请静止 | | | | |

学习技巧:

- 1、请务必先从指令表上的指令词勾选出要学习的指令词、这样就能顺畅、省时的进入学习设定。
- 2、遥控器按下的最佳时机是在黑猫说完“请将遥控器的X按键对着黑猫按下”提示音后, 再按遥控器上相应的功能按键。
- 3、常用红外线遥控器有分成: 一键多码和一键一码。在一键多码时请注意选择对应语音指令词。

Activation Key: **KITTY**

| AC | | TV | | FAN | | OTHER | | SETTING | |
|----|------------------------------|----|------------------------------|-----|--------------------------|-------|-----------------------------|---------|----------------------------------|
| 1 | KITTY, AC ON | 39 | KITTY, TV ON | 85 | KITTY, FAN ON | 122 | KITTY, PROJECTOR ON | 171 | KITTY, AIR DRYING ON |
| 2 | KITTY, AC OFF | 40 | KITTY, TV OFF | 86 | KITTY, FAN OFF | 123 | KITTY, PROJECTOR OFF | 172 | KITTY, ILLUMINATION ON |
| 3 | KITTY, TURN ON THE AC | 41 | KITTY, APPLE ON | 87 | KITTY, COLD WIND ON | 124 | KITTY, VENTILATOR ON | 173 | KITTY, STERILIZE ON |
| 4 | KITTY, TURN OFF THE AC | 42 | KITTY, APPLE OFF | 88 | KITTY, COLD WIND OFF | 125 | KITTY, VENTILATOR OFF | 174 | KITTY, WASH OFF |
| 5 | KITTY, LOW SPEED | 43 | KITTY, MI ON | 89 | KITTY, BREEZE ON | 126 | KITTY, FAN HEATER ON | 175 | KITTY, BEGIN TO CLEAN |
| 6 | KITTY, MIDDLE SPEED | 44 | KITTY, MI OFF | 90 | KITTY, BREEZE OFF | 127 | KITTY, FAN HEATER OFF | 176 | KITTY, MASSAGE CHAIR ON |
| 7 | KITTY, HIGH SPEED | 45 | KITTY, GOOGLE ON | 91 | KITTY, STRONG WIND ON | 128 | KITTY, DEHUMIDIFICATION ON | 177 | KITTY, MASSAGE CHAIR OFF |
| 8 | KITTY, AUTO SPEED | 46 | KITTY, GOOGLE OFF | 92 | KITTY, STRONG WIND OFF | 129 | KITTY, DEHUMIDIFICATION OFF | 178 | KITTY, STRONG MASSAGE |
| 9 | KITTY, DEGREE UP | 47 | KITTY, STB ON | 93 | KITTY, LIGHT WIND ON | 130 | KITTY, TURN ON THE LIGHTS | 179 | KITTY, SOFT MASSAGE |
| 10 | KITTY DEGREE DOWN | 48 | KITTY, STB OFF | 94 | KITTY, LIGHT WIND OFF | 131 | KITTY, TURN OFF THE LIGHTS | 180 | KITTY, STRONG VIBRATION |
| 11 | KITTY, ONE MORE DEGREE | 49 | KITTY, SIGNAL SOURCE ONE | 95 | KITTY, SWING OPEN | 132 | KITTY, ILLUMINATION ON | 181 | KITTY, SOFT VIBRATION |
| 12 | KITTY, ONE LESS DEGREE | 50 | KITTY, SIGNAL SOURCE TWO | 96 | KITTY, SWING OFF | 133 | KITTY, ILLUMINATION OFF | 182 | KITTY, FASTER |
| 13 | KITTY, WIND UP AND DOWN | 51 | KITTY, SIGNAL SOURCE THREE | 97 | KITTY, LIGHT ON | 134 | KITTY, TURN UP THE LIGHT | 183 | KITTY, SLOWER |
| 14 | KITTY, WIND LEFT AND RIGHT | 52 | KITTY, SIGNAL SOURCE A | 98 | KITTY, LIGHT OFF | 135 | KITTY, TURN DOWN THE LIGHT | 184 | KITTY, BACK CUSHION UP |
| 15 | KITTY, WIND STOP | 53 | KITTY, SIGNAL SOURCE B | 99 | KITTY, EXHAUST ON | 136 | KITTY, BRIGHT LIGHT | 185 | KITTY, BACK CUSHION DOWN |
| 16 | KITTY, WIND DOWN | 54 | KITTY, SIGNAL SOURCE C | 100 | KITTY, EXHAUST OFF | 137 | KITTY, SOFT LIGHT | 186 | KITTY, OPEN THE DOOR |
| 17 | KITTY, WIND UP | 55 | KITTY, VOLUME UP | 101 | KITTY, HEAT WIND ON | 138 | KITTY, CLOSE ROLLER BLIND | 187 | KITTY, CLOSE THE DOOR |
| 18 | KITTY, WIND LEFT RIGHT | 56 | KITTY, VOLUME DOWN | 102 | KITTY, HEAT WIND OFF | 139 | KITTY, OPEN ROLLER BLIND | 188 | KITTY, TURN ON WATER |
| 19 | KITTY, WIND RIGHT | 57 | KITTY, VOLUME MORE | 103 | KITTY, COOL WIND ON | 140 | KITTY, CLOSE SCREEN | 189 | KITTY, TURN OFF WATER |
| 20 | KITTY, STOP WIND | 58 | KITTY, VOLUME LESS | 104 | KITTY, COOL WIND OFF | 141 | KITTY, OPEN SCREEN | 190 | KITTY, MORE WATER |
| 21 | KITTY, WIND ROTATION | 59 | KITTY, PREVIOUS CHANEL | 105 | KITTY, RUSH WIND | 142 | KITTY, HANGER UP | 191 | KITTY, FLUSH PLEASE |
| 22 | KITTY, WIND WAGGLE | 60 | KITTY, NEXT CHANEL | 106 | KITTY, HIGH SPEED WIND | 143 | KITTY, HANGER DOWN | 192 | KITTY, CURTAIN UP |
| 23 | KITTY, AC MODE | 61 | KITTY, CHANEL PREVIOUS | 107 | KITTY, MEDIUM SPEED WIND | 144 | KITTY, RIGHT CURTAIN OPEN | 193 | KITTY, CURTAIN DOWN |
| 24 | KITTY, HEAT MOLD | 62 | KITTY, CHANEL NEXT | 108 | KITTY, LOW SPEED WIND | 145 | KITTY, RIGHT CURTAIN CLOSE | 194 | KITTY, STOP THE CURTAIN |
| 25 | KITTY, AIR SUPPLY MOLD | 63 | KITTY, PRESS BUTTON UP | 109 | KITTY, NATURAL WIND | 146 | KITTY, RIGHT CURTAIN STOP | 195 | KITTY, OPEN THE INSIDE CURTAIN |
| 26 | KITTY, DEHUMIDIFICATION MODE | 64 | KITTY, PRESS BUTTON DOWN | 110 | KITTY, SLEEP WIND | 147 | KITTY, LEFT CURTAIN OPEN | 196 | KITTY, CLOSE THE INSIDE CURTAIN |
| 27 | KITTY, AUTO MODE | 65 | KITTY, PRESS BUTTON LEFT | 111 | KITTY, LIGHT WIND | 148 | KITTY, LEFT CURTAIN CLOSE | 197 | KITTY, STOP THE INSIDE CURTAIN |
| 28 | KITTY, NORMAL TEMPERATURE | 66 | KITTY, PRESS BUTTON RIGHT | 112 | KITTY, WIND UP | 149 | KITTY, LEFT CURTAIN STOP | 198 | KITTY, OPEN THE OUTER CURTAIN |
| 29 | KITTY, ROOM TEMPERATURE | 67 | KITTY, BUTTON CONFIRMED | 113 | KITTY, WIND DOWN | 150 | KITTY, CURTAIN OPEN | 199 | KITTY, CLOSE THE OUTER CURTAIN |
| 30 | KITTY, AC TWENTY-FIVE | 68 | KITTY, PREVIOUS PAGE | 114 | KITTY, FLOOR FAN ON | 151 | KITTY, CURTAIN CLOSE | 200 | KITTY, STOP THE OUTER CURTAIN |
| 31 | KITTY, AC TWENTY-SIX | 69 | KITTY, CLICK PREVIOUS BUTTON | 115 | KITTY, FLOOR FAN OFF | 152 | KITTY, CURTAIN STOP | 201 | KITTY, OPEN THE RIGHT WINDOW |
| 32 | KITTY, AC TWENTY-SEVEN | 70 | KITTY, CLICK NEXT BUTTON | 116 | KITTY, CEILING FAN ON | 153 | KITTY, WORKING ON | 202 | KITTY, CLOSE THE RIGHT WINDOW |
| 33 | KITTY, AC TWENTY-EIGHT | 71 | KITTY, CLICK LEFT BUTTON | 117 | KITTY, CEILING FAN OFF | 154 | KITTY, WORKING OFF | 203 | KITTY, STOP THE RIGHT WINDOW |
| 34 | KITTY, AC TWENTY-NINE | 72 | KITTY, CLICK RIGHT BUTTON | 118 | KITTY, AIR BOX ON | 155 | KITTY, STRONG WIND | 204 | KITTY, OPEN THE LEFT WINDOW |
| 35 | KITTY, AC THIRTY | 73 | KITTY, CONFIRMED | 119 | KITTY, AIR BOX OFF | 156 | KITTY, SOFT WIND | 205 | KITTY, CLOSE THE LEFT WINDOW |
| 36 | KITTY, MOLD CYCLE | 74 | KITTY, BACK | 120 | KITTY, ICE FAN ON | 157 | KITTY, STRONG POWER | 206 | KITTY, STOP THE LEFT WINDOW |
| 37 | KITTY, WIND SPEED CYCLE | 75 | KITTY, PRESS PREVIOUS BUTTON | 121 | KITTY, ICE FAN OFF | 158 | KITTY, SOFT POWER | 207 | KITTY, OPEN THE WINDOW |
| 38 | KITTY, WIND DIRECTION CYCLE | 76 | KITTY, PRESS NEXT BUTTON | | | 159 | KITTY, SLOW POWER | 208 | KITTY, CLOSE THE WINDOW |
| | | 77 | KITTY, PRESS LEFT BUTTON | | | 160 | KITTY, PLEASE ACTIVATE | 209 | KITTY, STOP THE WINDOW |
| | | 78 | KITTY, PRESS RIGHT BUTTON | | | 161 | KITTY, PLEASE SWING | 210 | KITTY, WINDOW UP |
| | | 79 | KITTY, MENU PAGE | | | 162 | KITTY, PLEASE RAISE UP | 211 | KITTY, WINDOW DOWN |
| | | 80 | KITTY, MAIN PAGE | | | 163 | KITTY, PLEASE LOWER DOWN | 212 | KITTY, STOP WINDOW |
| | | 81 | KITTY, PAGE UP | | | 164 | KITTY, PLEASE MOVE FORWARD | 213 | KITTY, OPEN THE INSIDE WINDOW |
| | | 82 | KITTY, PAGE DOWN | | | 165 | KITTY, PLEASE STEP BACK | 214 | KITTY, CLOSE THE INSIDE WINDOW |
| | | 83 | KITTY, RETURN | | | 166 | KITTY, TURN LEFT | 215 | KITTY, STOP THE INSIDE WINDOW |
| | | 84 | KITTY, EXIT | | | 167 | KITTY, TURN RIGHT | 216 | KITTY, OPEN THE OUTER WINDOW |
| | | | | | | 168 | KITTY, PAUSE | 217 | KITTY, CLOSE THE OUTER WINDOW |
| | | | | | | 169 | KITTY, STOP | 218 | KITTY, STOP THE OUTER WINDOW |
| | | | | | | 170 | KITTY, BE MOTIONLESS | | |
| | | | | | | | | 219 | KITTY, REMOTE CONTROL SETTING |
| | | | | | | | | 220 | KITTY, DELETE ALL REMOTE CONTROL |
| | | | | | | | | 221 | KITTY, REPEAT COMMAND |
| | | | | | | | | 222 | KITTY, LEARN AGAIN |
| | | | | | | | | 223 | KITTY, DELETE CONFIRMED |
| | | | | | | | | 224 | KITTY, DON'T DELETE |
| | | | | | | | | 225 | KITTY, EXIT SETING |
| | | | | | | | | 226 | KITTY, MY VERSION |
| | | | | | | | | 227 | KITTY, LOUDER |
| | | | | | | | | 228 | KITTY, LOWER YOUR VOICE |

Learning Skills:

1. Please be sure to check the instruction words to be learned from the instruction words on the instruction table first, so that you can enter the learning setting smoothly and time-saving.
2. The best time to press the remote control is after the KITTY says "please press the X key of the remote control to press the KITTY" prompt tone, and then press the corresponding function keys on the remote control.
3. Commonly used infrared remote control is divided into: one key multiple code and one key one code. Note to select the corresponding voice command words when using one key and multiple codes.